

## [ ENGLISH ]

## CAUTION

## &lt;Remarks on batteries&gt;

 
 
Please be sure to observe the following correct battery usage.

Misusing batteries may cause leakage or a battery explosion, which may result in a malfunction of the clock or personal injury.

1. Insert batteries into the battery holders, locating the plus (+) and minus (-) ends correctly.
2. If you replace batteries, replace all of them at one time with new one as specified in this manual.
3. Batteries used in this clock are not rechargeable. Never attempt to recharge the batteries.
4. Do not attempt to solder anything directly on to the batteries.
5. Do not expose batteries to direct sunlight, heat, or high humidity.
6. When the clock stops, or it is no longer used, remove the batteries.
7. As the initial batteries are included at the factory, the actual life once in your possession may be shorter than the specified period.

## &lt;Regarding the Included Chain and Decorative Cape&gt;

1. There is a risk of choking or injury. Never put the included chain or decorative cape in your mouth, and never wrap them around your neck, fingers, or any other body parts.
2. If using the clock without attaching the included chain and decorative cape, store them out of reach of small children.
3. These accessories are designed exclusively for this product. Do not use them for any other purpose.

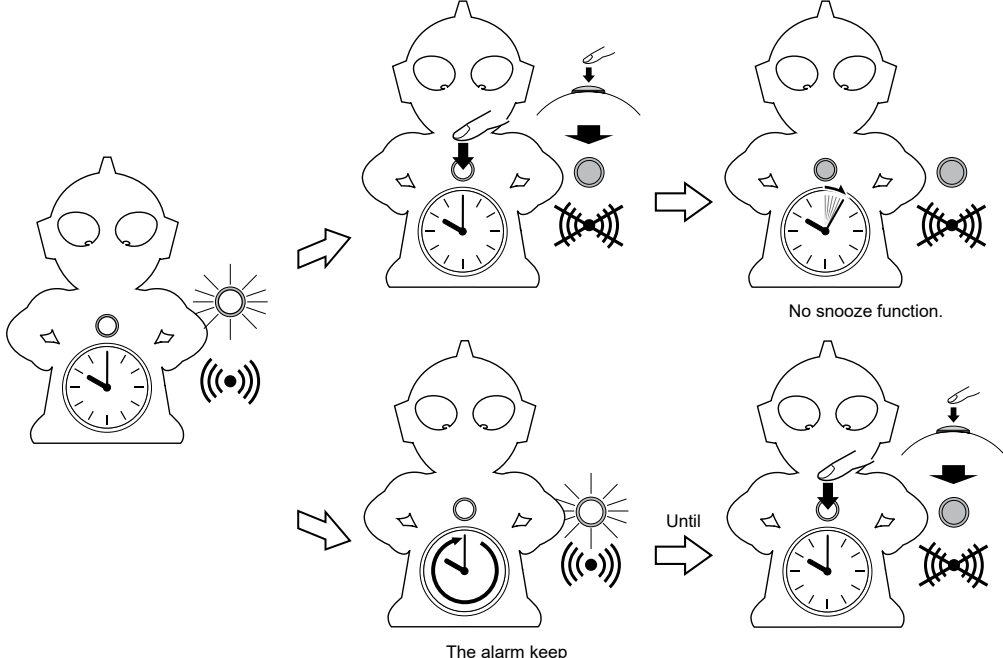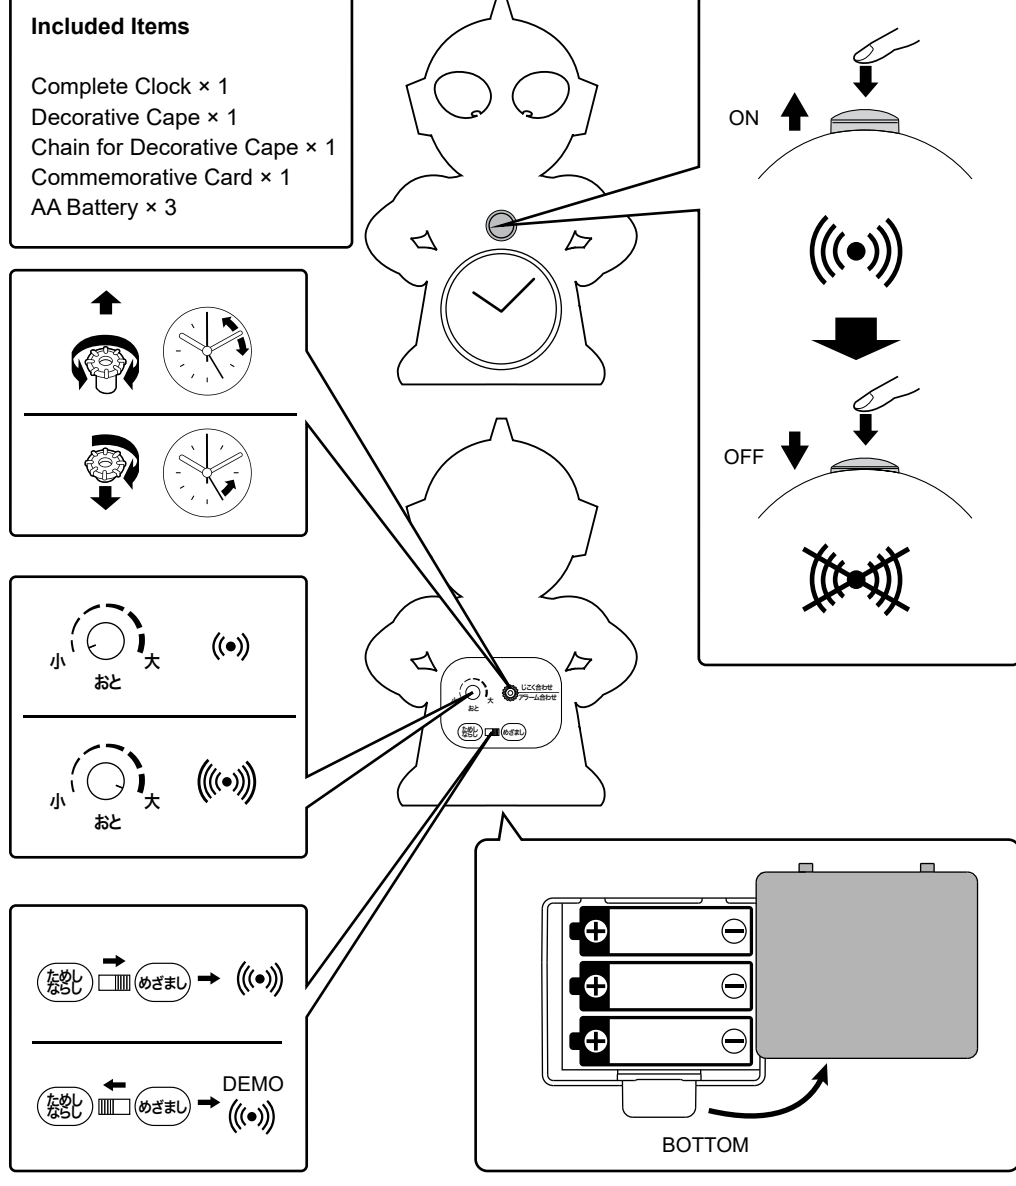

## How to monitor the alarm sound

1. Switch to "ためしならし" side, to activate demo function
2. Lighting up green with flashing red, alarm "ON" sound appear.
3. Lighting up green , alarm "OFF" sound appear.

## How to attach the decorative cape



1. Attach the chain to one side of the decorative cape.
2. Place the decorative cape over the shoulder of the clock body.
3. Attach the chain to the other side.

## How to Remove the decorative cape

1. Remove the chain from one side.
- ※When removing the chain, hold both the tab (transparent plastic part) located on the inside of the decorative cape and the fabric portion of the cape together while detaching. If you pull only on the fabric of the decorative cape, it may tear or become deformed.

[Outside]

  [Inside]

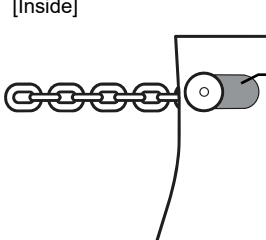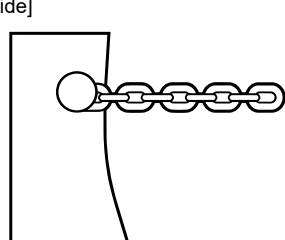

Tab (transparent plastic part)  
When removing the chain,  
pinch it together with the fabric.

2. Remove the decorative cape from the clock body.

## Caution

- ※The decorative cape is made of fabric. Pulling it strongly may cause tearing or deformation.
- ※Do not wash or iron the decorative cape. This may cause tearing or deformation.

## Battery life (AA Alkaline x 3)

- Approx. 1 year.

Remarks: Depending on the item, the battery initially supplied may not have a battery life of 1 year.

[繁體中文]

注意

<電池說明>

 
 
 
- 請務必遵守以下電池的正確使用方法。
- 誤用電池會造成洩漏或電池爆炸，可能會導致時鐘故障或人身傷害。
1. 將電池插入電池座，正確放置正極(+)和負極(-)兩端
  2. 如需更換電池，請根據手冊上指示一次性更換所有電池。
  3. 本時鐘使用的電池不可充電。請勿試圖給該電池充電。
  4. 請勿試圖將其他部件直接焊接到電池上。
  5. 請勿將電池暴露在陽光直射、高溫或高濕度環境下。
  6. 當時鐘停止或不使用時，請取出電池。
  7. 因時鐘所含電池在工廠內插入過，實際使用壽命可能會短於指定時間。

<關於隨附鏈條和裝飾披肩>

1. 存在窒息或受傷的風險。切勿將隨附的鏈條或裝飾披肩放入口中，也切勿將其纏繞在脖子、手指或身體任何其他部位。
2. 如果未安裝隨附的鏈條和裝飾披肩，請將它們放在兒童無法觸及的地方。
3. 這些配件是專為本產品設計。請勿將其用於任何其他用途。

**內含物品**

完整時鐘 × 1  
裝飾披風 × 1  
裝飾披風鏈 × 1  
紀念卡 × 1  
AA電池 × 3

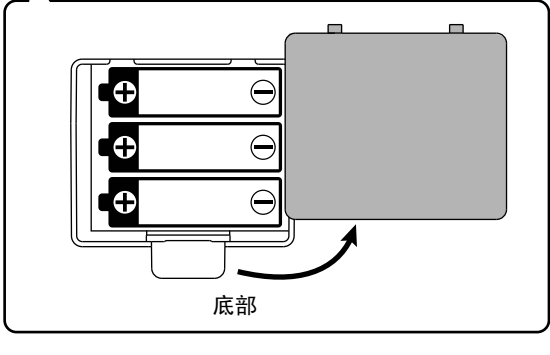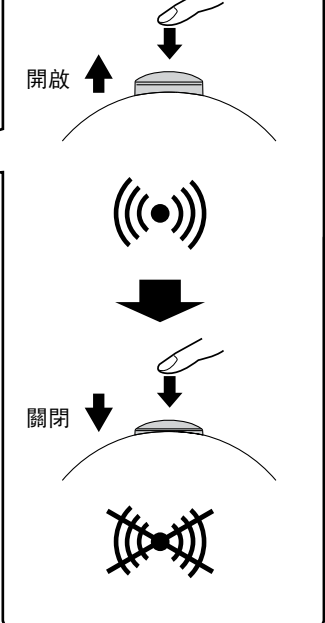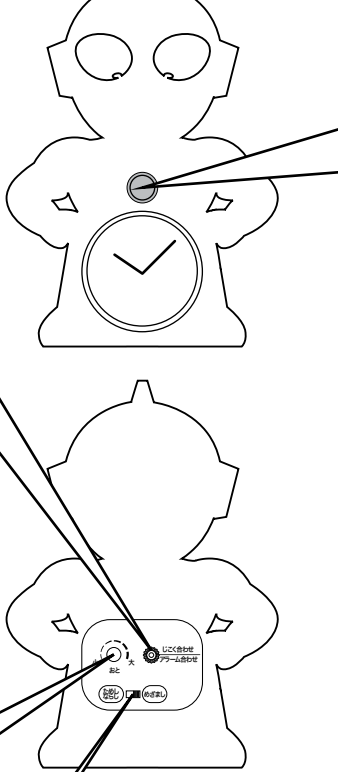

↑  
↑  
↑

 
 
 
↑  
↑  
↑

小  
おと  
大  
((•))



小  
おと  
大  
(((•)))

なめし → めざまし → ((•))

なめし ← めざまし → 示範音 ((•))

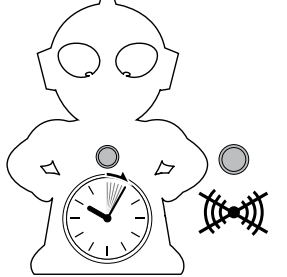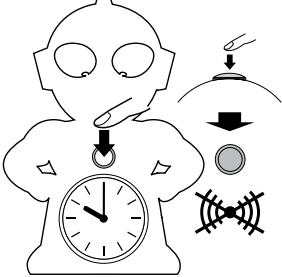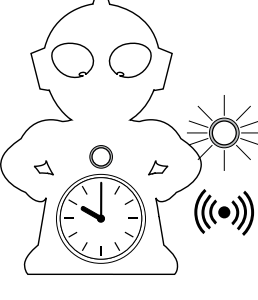



沒有貪睡功能。

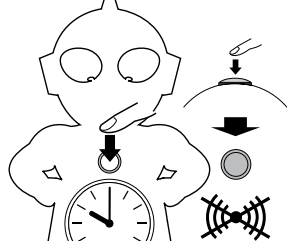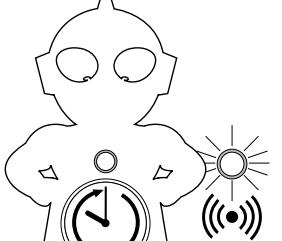  


響鬧音一直會不停響。

 
如何使用示範音

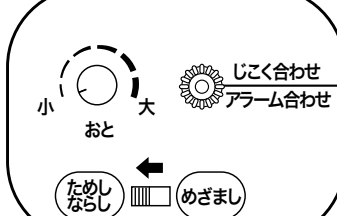 1. 

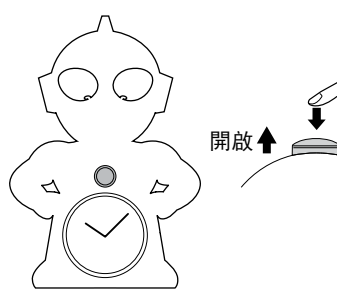
切換到 "なめしならし" 側，以啟動演示功能。
2. 

  開啟 ↑

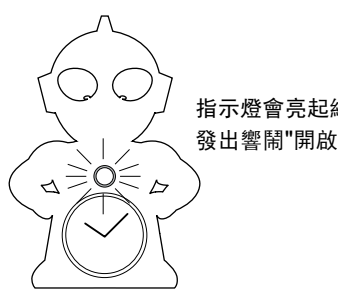

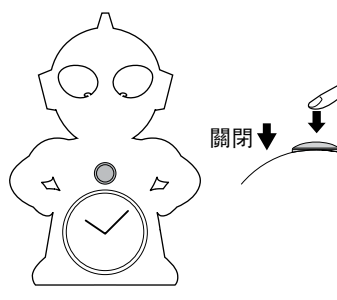
指示燈會亮起綠燈並轉紅色閃爍，發出響鬧"開啟"聲。
3. 

 
關閉 ↓

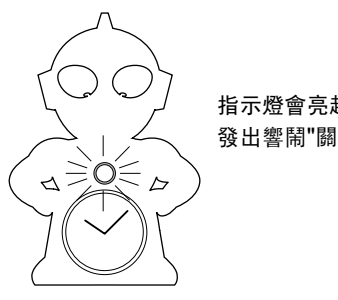


指示燈會亮起綠燈，發出響鬧"關閉"聲。

 如何安裝裝飾披肩


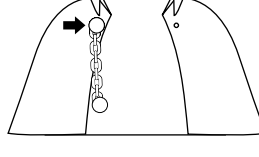 
1. 

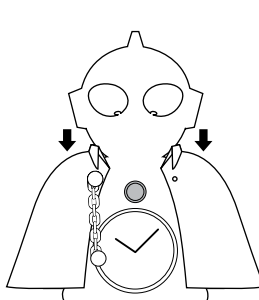將鏈條綁在裝飾披肩的一側。
2. 

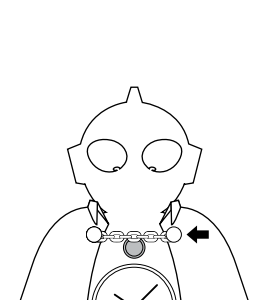 將裝飾披風搭在鐘體的肩膀上。
3. 

將鏈條連接到另一端。

  如何移除裝飾披肩

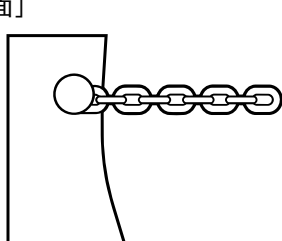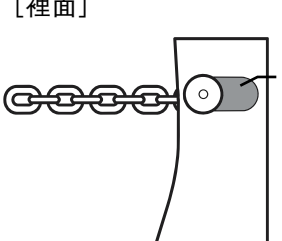1. 從一側取下鏈條。  
※取下鏈條時，請同時握住裝飾披風內側的拉片（透明塑膠部分）和披風的布料部分，用力將其取下。請勿用力拉扯裝飾斗篷之布料，否則可能導致撕裂或變形。  
[表面]  [裡面] 

拉片（透明塑膠部分）

取下鏈條時，請將其與布料捏合在一起。
2. 從鐘體上取下裝飾披風。

注意

- ※裝飾披肩由布料製成。用力拉扯可能會導致撕裂或變形。
- ※請勿水洗或熨燙裝飾披肩。否則可能會導致撕裂或變形。

電池壽命 (AA Alkaline x 3)

- 大約1年。
- 備註：根據型號的不同，附贈電池的壽命可能少於一年。

**[ 简体中文 ]**

**注意**

### ＜电池说明＞

请遵守以下正确的电池使用方法。电池使用不当会造成泄漏或电池爆炸，引起时钟故障或人员伤亡。

1. 将电池插入电池座。正确地放置正(+)和负(-)极。
2. 如果更换电池，要按照本手册将它们同时更换。
3. 本时钟内的电池不可充电。切勿将电池充电。
4. 不要向电池直接焊任何物体。
5. 电池不要直接暴露于阳光、热源或高湿度。
6. 当时钟停止或者不再使用时，要将电池取出。
7. 由于电池最初在工厂插入过，它们在你购买后的实际寿命可能比规定时间要短些。

 
 
 
 
 
 
 
### 〈关于随附链条与装饰披肩〉

1. 謹防窒息或受傷危險，切勿將隨附的鏈條或裝飾披肩放入口中；亦切勿將其纏繞在脖頸、手指或身體的其他任何部位。
2. 若在使用本時鐘時未安裝隨附的鏈條和裝飾披肩，請務必將這些配件存放在兒童接觸不到的地方。
3. 這些配件是專為本產品設計。請勿將其用於任何其他用途。

- 此三配件是為中產階級設計。請勿將它用於任何其它用途。

**随附物品**

时钟总成 × 1  
装饰披肩 × 1  
装饰披肩挂链 × 1  
纪念卡 × 1  
5号电池 × 3

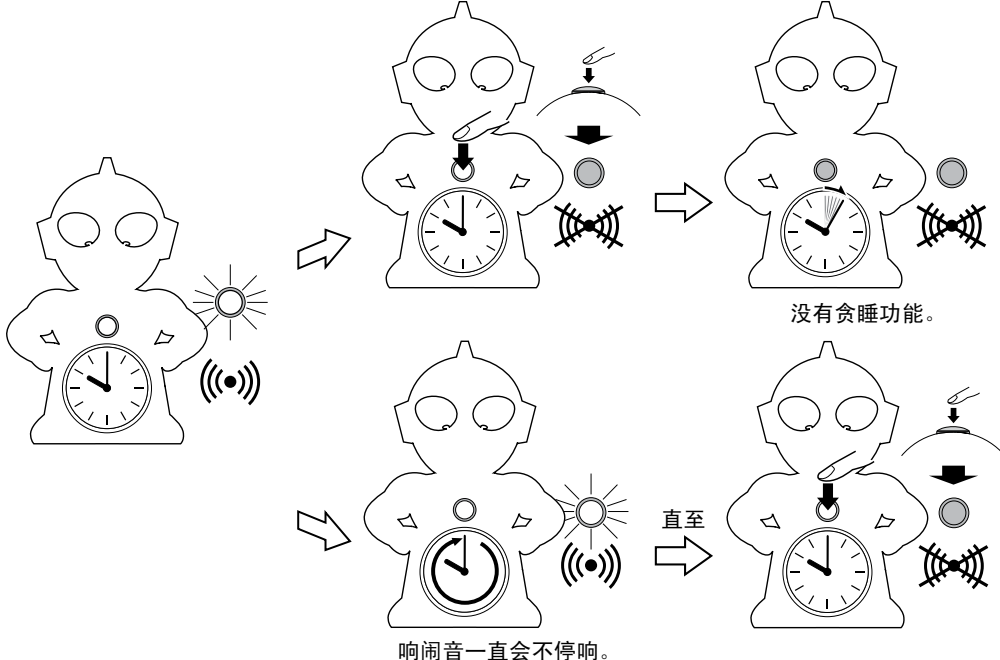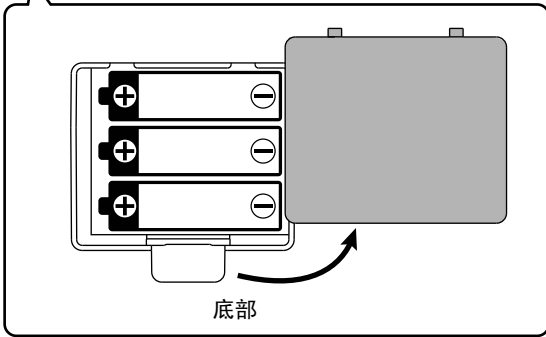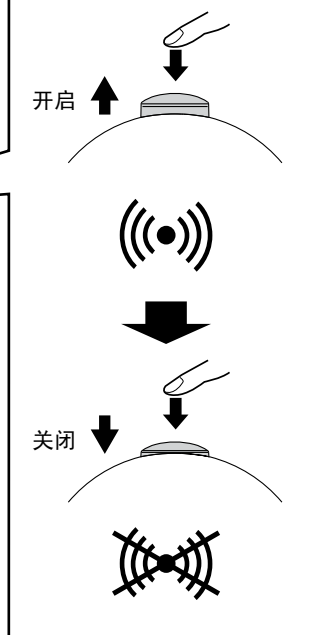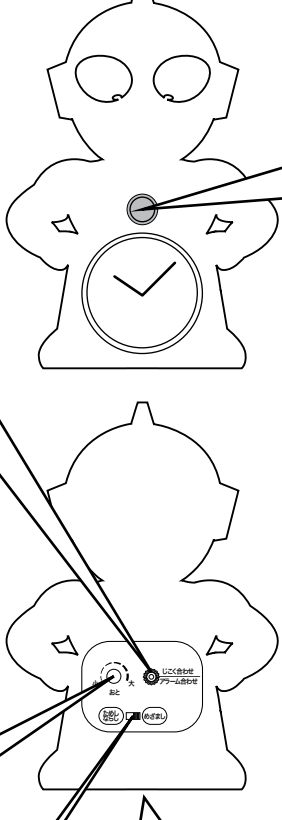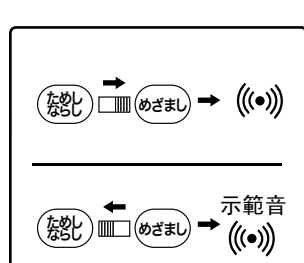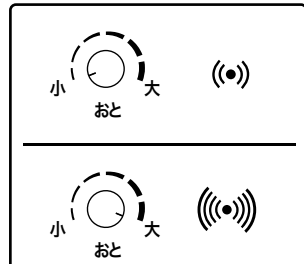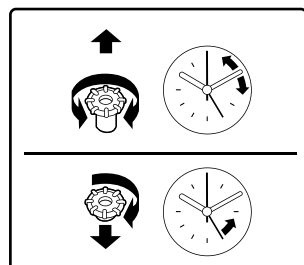

## 如何使用示范音

1.  切换到 "ためしならし" 側，以启动演示功能。

2.  指示灯会亮起绿灯并转红色闪烁，发出响闹“开启”声。x

3.  指示灯会亮起绿灯，发出响闹“关闭”声。

## 如何安裝裝飾披肩

1.  將鏈條綁在裝飾披肩的一側。

- 2.
- 
- 將裝飾披風搭在鐘體的肩膀上。

 
 
- 3.
- 
- 將鏈條連接到另一端。

## 如何拆卸装饰披肩

- ※拆卸挂链时, 请同时捏住装饰披肩内侧的搭扣(透明塑料部分)与披肩的面料部分, 然后将其分离。请勿单独拉扯装饰性披肩的面料, 否则可能导致撕裂或变形。

「外側」

「内側」

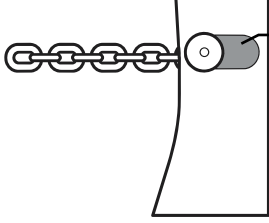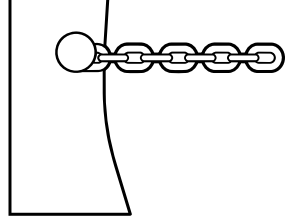

拉片（透明塑膠部分）

取下鏈條時，請將其與布

2. 从时钟主体上取下装饰披肩。

**注意**

※装饰披肩为布艺面料制品。请勿用力拉拽，否则可能导致破损或变形。  
※请勿洗涤或熨烫装饰披肩。否则可能导致破损或变形。

電池壽命 (AA Alkaline x 3)

• 大约1年。

备注：根据