

SEIKO




INSTRUCTIONS
用法說明

SEIKO

HE081-1



HOW TO START THE CLOCK 怎樣開動

1. INSERT BATTERIES 放入電池

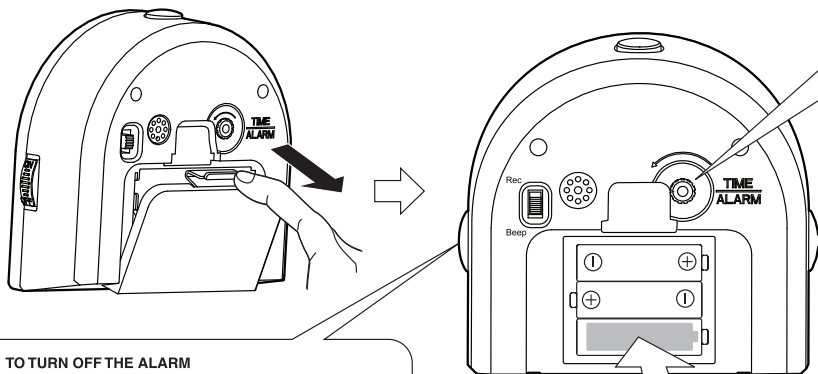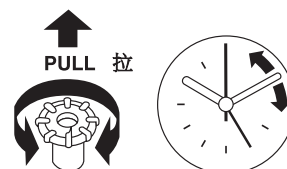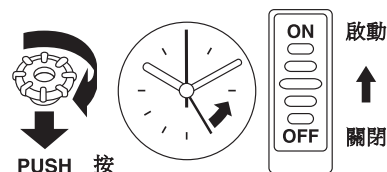4. TO TURN OFF THE ALARM
如何使鐘停止響鬧2. TO SET THE TIME
怎樣校準時間3. TO SET THE ALARM TIME
怎樣校準鬧鐘

5. "SNOOZE" FUNCTION


怎樣使用歌睡"SNOOZE"響鬧功能

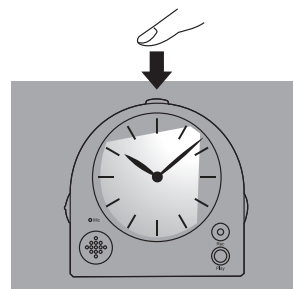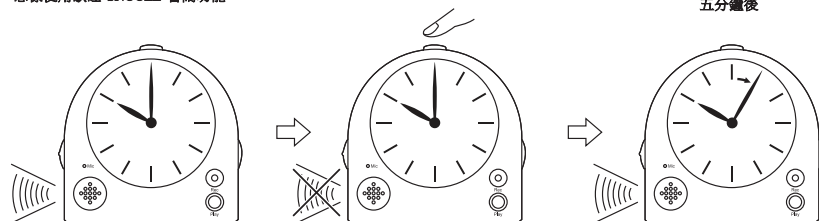

6. SELECTION OF ALARM SOUNDS

怎樣選擇響鬧樂音

- Rec : Recorded message 記錄訊息
- Beep : Alarm sound 響鬧樂音


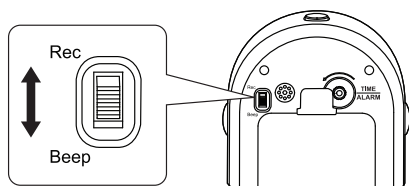


7. TO RECORD THE MESSAGE 記錄訊息

► Press the REC button continuously
持續地按記錄"REC"鍵


► Record the message to the microphone. Start to record while pressing the REC button continuously. (Recording time is 15 seconds.)

使用麥克風記錄訊息。持續地按"REC"鍵便可開始錄音。(記錄的時間為15秒)

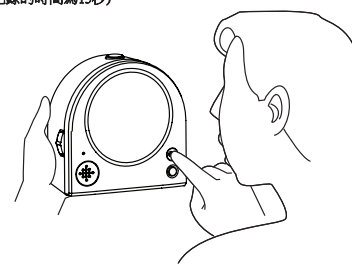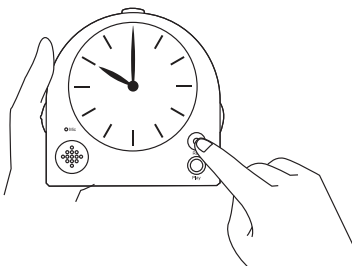

8. TO PLAYBACK THE MESSAGE 重播訊息


► Press the PLAY button
按播放"PLAY"鍵

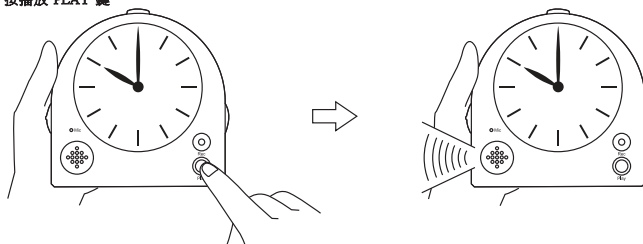

9. SELECTION OF VOLUME

怎樣選擇音量

- MAX : Maximum volume 大音量
- MIN : Minimum volume 小音量

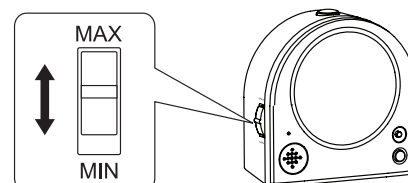

● Volume control only affects the the playback of recorded sound.
音量選擇只適用於錄音訊息

● Battery life Approximate 10 months 電池壽命：大約 10 個月

● Recording function is for your personal use or pleasure only.

Use of recorded material without permission of copyright holders is prohibited.

此產品之錄音功能，只能作個人娛樂使用。未得著作權持有人許可，不可用於其他用途上。