


LORUS

INSTRUCTIONS

L-HL027-1

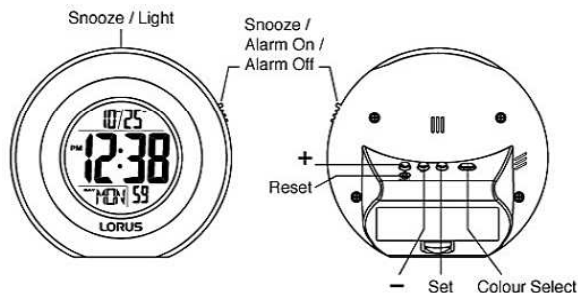

SPECIFICATIONS

- Calendar with day-of-the-week display.
- Hour, minute and second display.
- 12 or 24-hour format.
- Alarm with snooze function.
- Superglow colour changeable backlight.

BATTERY INSTALLATION

Open the battery cover at the bottom of the clock and insert the batteries by following the correct "+" and "-" signs inside the battery compartment.

NOTE: remove the clear film label over the LCD panel, so LCD panel is visible.

- Open the battery cover.
- Insert 3 x AA batteries in the compartment as indicated by the polarity symbols (+) and (-).
- Close the battery cover.

Warning : Do not mix old and new batteries
Do not mix alkaline, standard (carbon-zinc) or
rechargeable (nickel cadmium) batteries.

TO SET THE CALENDAR

1. Press SET button for calendar.
2. Press + or - button sequentially to set year.
3. Hold down either + or - button to change the year at high speed.
4. Press SET button to confirm year set and go to date set.
5. Press + or - button sequentially to set date.
6. Hold down either + or - button to change the date at high speed.

TO SET THE TIME

1. Press SET button after calendar setting mode.
2. Press + or - button sequentially to set minutes.
3. Hold down either + or - button to change the time at high speed.

TO SET THE 12HR / 24HR FORMAT


1. Press SET button after desired time set.
2. Press + or - button to toggle between 12hr or 24hr time display format.
3. Press SET button to confirm and quit the setting mode.

USING ALARM


TO SET ALARM TIME

When the clock is at normal time display, press + or - to set your desired alarm time, hold down + or - will accelerate setting in faster speed.

TO ACTIVATE ALARM FUNCTION

1. Slide the SNZ/ALARM ON/OFF switch to ON position, the sign  will appear on the time display. The alarm function is activated.
2. When the alarm sounds, the LCD backlight will toggle between 7 different colours. Press the SNOOZE/LIGHT button can stop the alarm. It will sound the same time in the next day.
3. To deactivate the alarm function, slide the SNZ/ALARM ON/OFF switch to OFF position.

TO ACTIVATE THE SNOOZE ALARM

1. Slide the SNZ/ALARM ON/OFF switch to SNZ position. The sign  and Zz will appear on the time display.
2. When the alarm sounds, the LCD backlight will toggle between 7 different colours. Press the SNOOZE/LIGHT button can stop the alarm. It will sound again in approximately 5 minutes.
3. To deactivate the snooze alarm, slide the SNZ/ALARM ON/OFF switch to the OFF position.

BACKLIGHT COLOUR SELECTION AND USING THE SUPERGLOW BACKLIGHT

Press COLOUR SELECT button can toggle the backlight of LCD display in 7 different colours.

You may check the time any time in the dark by simply pressing the SNOOZE/LIGHT button once. The display will light up with a soft glow that lasts for a while. The display colour will be the same as the one you selected by COLOUR SELECT button. You can read the time easily and clearly.

Note : Frequent use of this feature will affect battery life.

BACKLIGHT DEMO

Press and hold COLOUR SELECT button can activate the backlight demo feature. The LCD backlight will toggle between 7 different colours. The alarm will also sound. This feature will last for 1 minute or can be stopped by pressing SNOOZE/LIGHT button.

CARE OF YOUR CLOCK

- Avoid exposing your clock to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Do not subject the clock to excessive force, shock, dust, temperature or humidity. Any of these conditions may shorten the life of the clock.
- Do not tamper with any of the internal components of this clock. This will invalidate the warranty and may cause damage.
- Use only fresh batteries. Mixing old and new batteries may cause battery leakage.